

# DOMESTIC HOT WATER SENSOR KIT

## INSTRUCTIONS

### Kit #550002958

Kit installation shall be completed by qualified agency.

#### **⚠ WARNING**

Fire, explosion, asphyxiation and electrical shock hazard. Improper installation could result in death or serious injury. Read this instruction and understand all requirements, including requirements of authority having jurisdiction, before beginning installation. Installation not complete until appliance operation verified per Installation, Operation & Maintenance Manual provided with boiler.

Sensor can be used on a standard Indirect Hot Water tank. When it is connected to the boiler, sensor will control Indirect Tank temperature.

1. Follow instructions To TURN OFF GAS TO APPLIANCE found on Operating Instructions label on boiler or in Installation, Operation & Maintenance Manual. Verify all electrical power to boiler is turned off.

#### **⚠ WARNING**

Electrical shock hazard. Turn OFF electrical power supply at service panel.

2. Remove front jacket.

#### **⚠ WARNING**

Burn hazard. Verify heat exchanger has cooled or use appropriate personal protection equipment.

3. Before inserting sensor into Indirect tank well, thoroughly coat sensor with Thermopaste supplied with sensor kit.
4. Slide sensor into well until it bottoms out. See figure 1.
5. Secure sensor wire to well with included clip. See figures 1 and 2.
6. Route sensor wire to boiler low voltage terminal block. Remove the two resistors on terminals 7 & 8 of 8-pin terminal strip, item #155. See figure 4 - wiring diagram.
7. Install sensor wires onto terminals 7 & 8. See figures 5 and 6.
8. Secure sensor wire.
9. Restore power to boiler. Boiler will automatically recognize the sensor.

**Figure 1 - Slide Sensor Into well of Indirect Tank**



**Figure 2 - Secure Sensor Wire to Well With Clip**



**Figure 3 - Sensor Wire Secured to Well With Clip**




# DOMESTIC HOT WATER SENSOR KIT

10. See Installation, Operation & Maintenance Manual for adjusting DHW tank temperature and operation.
11. Resume operation using Installation, Operation & Maintenance Manual.
12. Verify proper operation by following START UP PROCEDURE in Installation, Operation & Maintenance Manual.
13. Install front cover.


<b>DOMESTIC HOT WATER SENSOR KIT #55002958</b>		
DESCRIPTION	PART #	QTY
DHW Tank Sensor	-	1
Clip	-	1
Thermopaste		1
Instructions	240010745	1

**Figure 4 - Wiring Diagram**

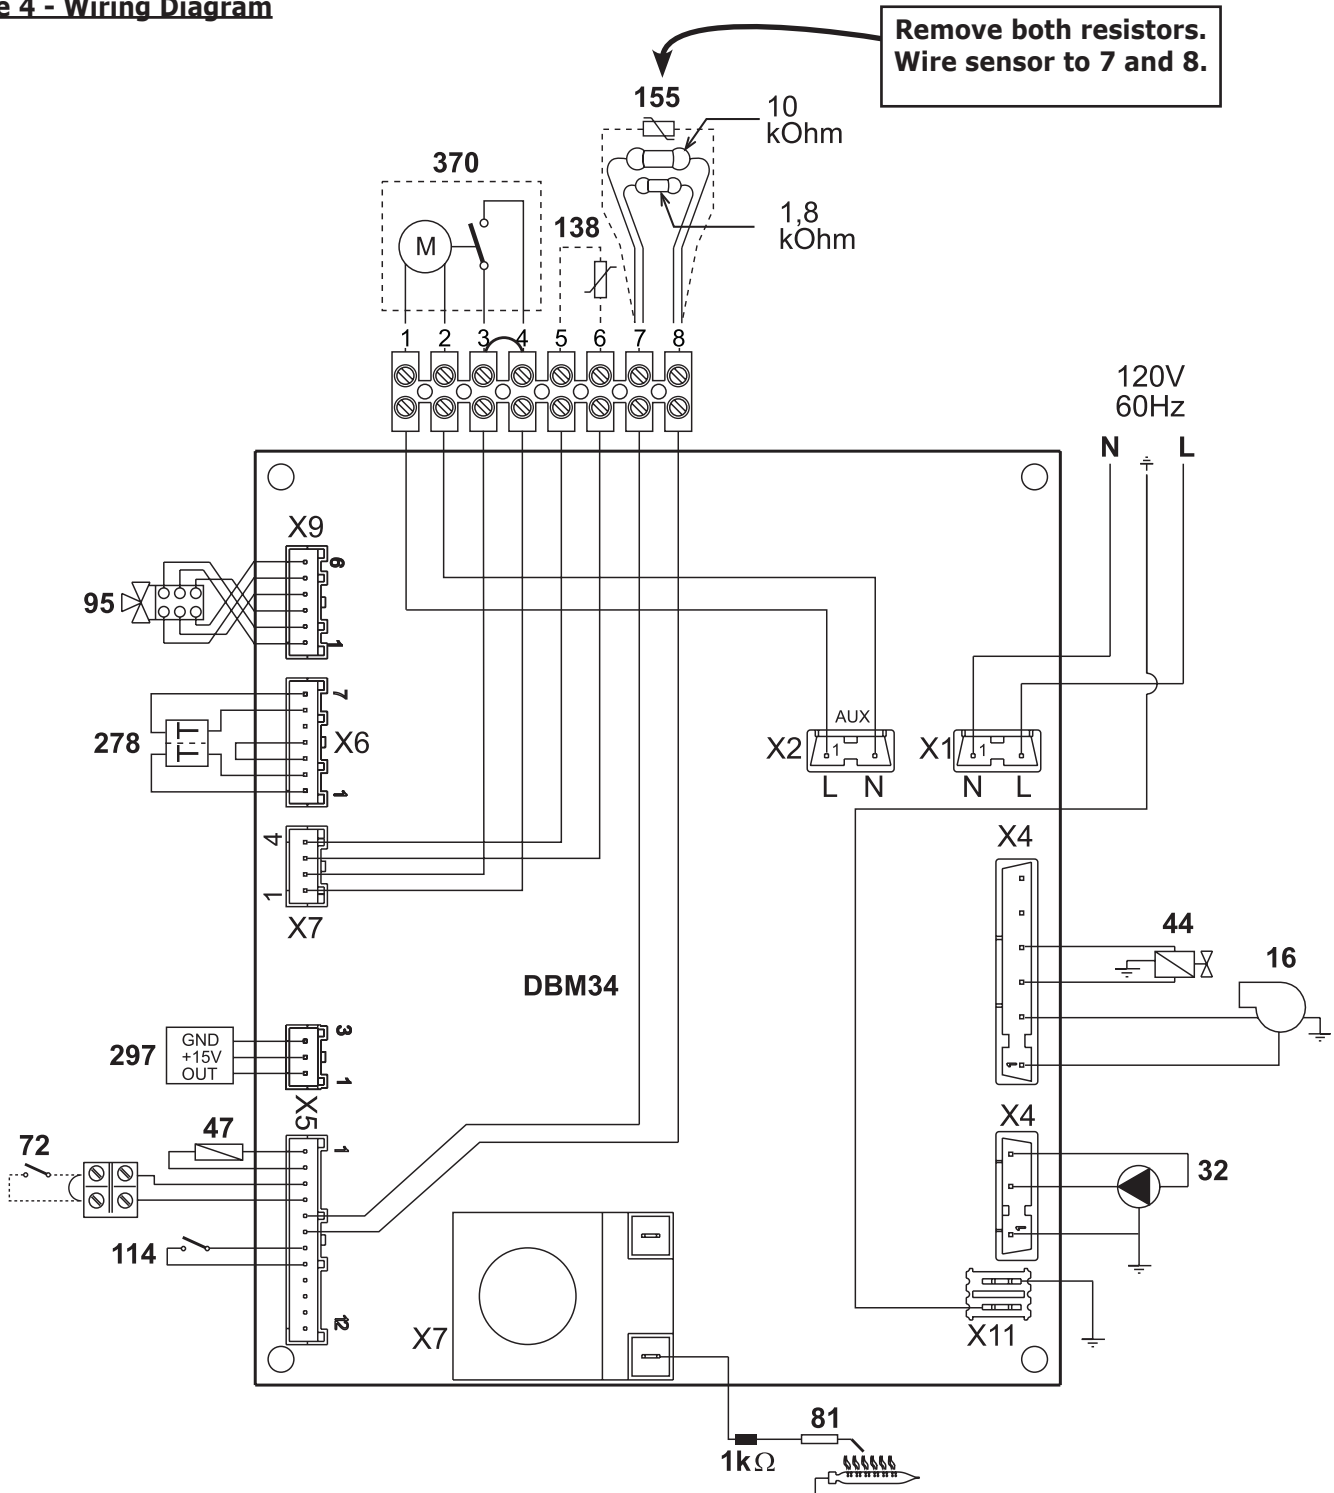

# DOMESTIC HOT WATER SENSOR KIT

Figure 5 - Low Voltage Terminal Strip, CCB-150 Shown

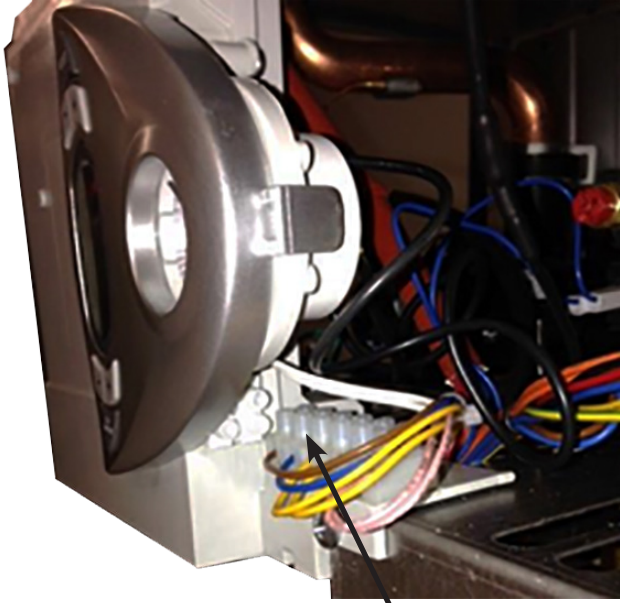

**Low Voltage Terminal Strip**

Figure 6 - Low Voltage Terminal Strip Removed from Boiler, CCB -150 Shown



**Low Voltage Terminal Strip Removed**

Figure 6

Temperature Deg F	Resistance in Ohms
32	32505
60	15689
70	11935
77	10000
100	8060
110	4732
120	3748
130	3104

